



LEVER INSTALLATION TEMPLATE

for First Choice for RIM 3790 Exit Device
Model L3710-E1 Lever Trim Left Hand Reverse Bevel
With electric control

3/8" drill on exterior side and countersink
for #10-32 on interior side of door 2 places

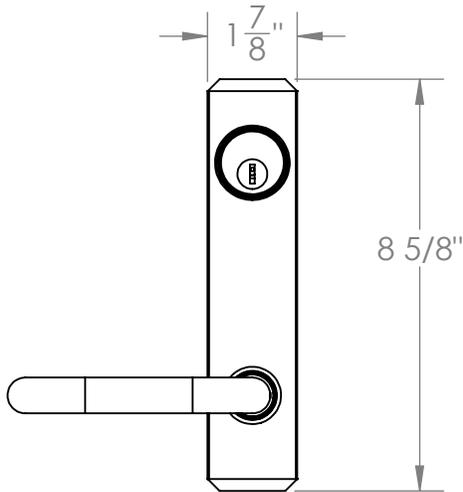

SEE EXIT DEVICE
TEMPLATE FOR BACKSET

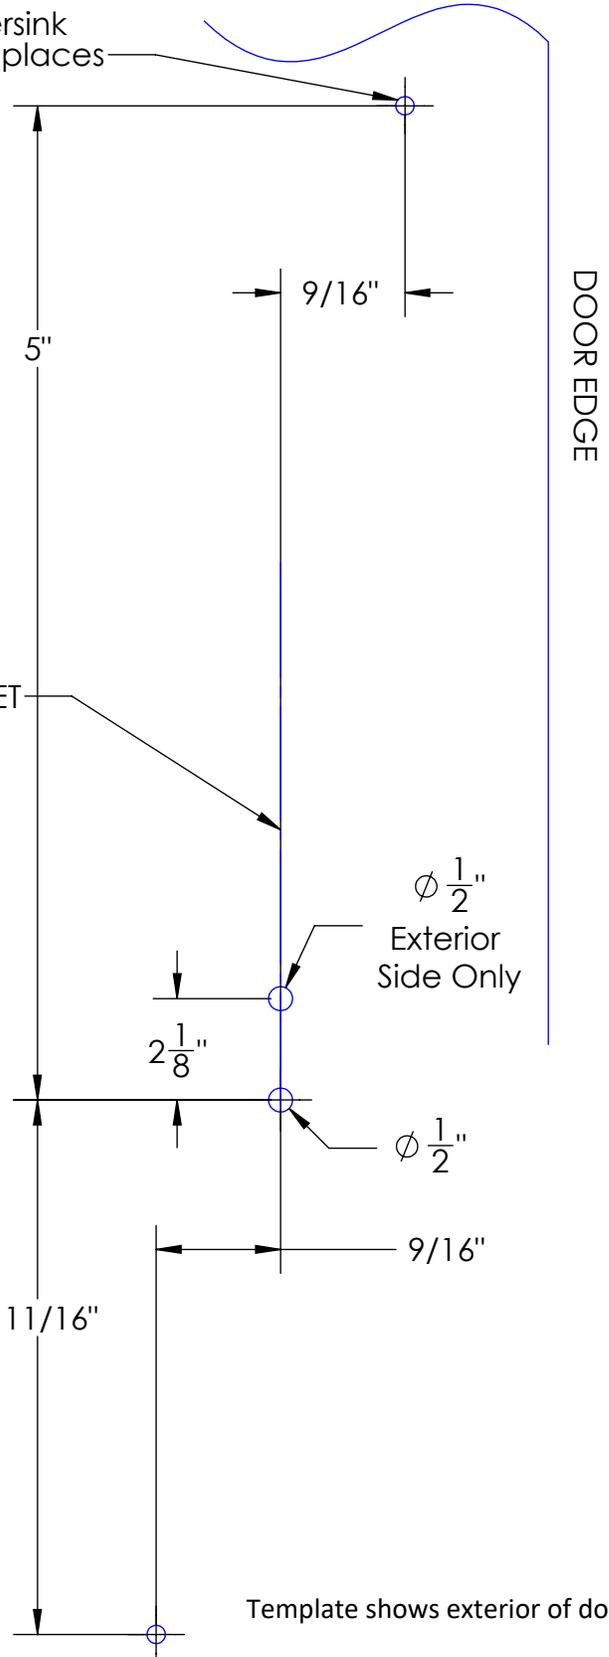

DOOR & FRAME PREPARATION INSTRUCTIONS

FOR CENTERLINE REFERENCE USE THE EXIT DEVICE
TEMPLATE TO
LOCATE PINION GEAR HOLE, ALSO KNOWN AS
THE OPERATOR HOLE.

ELECTRICAL CONNECTION

Wiring is to be brought
from the frame to the lock
area of the door. 24VDC
300mA

FIRST CHOICE
BUILDING PRODUCTS

REVISED: 09.17.2018