


- 2. PLACE THE 2 INSIDE MOUNTING POSTS THROUGH HOLE NUMBER 2 AS DESIGNATED ON THE ROSE-
- 3. HOLDING THE 2 POSTS IN POSITION SLIDE ONTO THE MORTISE WITH POSTS GOING THROUGH THE MORTISE THROUGH HOLES, SEE FIG 2, NOTE- CAN INSTALL THE KNOB ASSEMBLY ON THE OUTSIDE
- DESIGNATED ON THE ROSE- SEE FIG 2. ALIGN THE SCREWS WITH THE POSTS AND TIGHTEN.
- NOTE: ONCE THE KNOB ASSEMBLY IS SET ON BOTH SIDES- ROTATE THE KNOB ON BOTH SIDES TO ENSURE THE MORTISE LATCH RETRACTS AND THERE IS NO BINDING. IF THE LATCH OR KNOB BINDS REMOVE THE KNOB ASSEMBLY FROM THE MOUNTING SCREW SIDE AND LOOSEN THE MOUNTING SCREWS AND ALIGN THE ROSE WITH THE CENTER OF THE HUBS AS MUCH AS
- 6. INSERT THE ALLEN WRENCH THROUGH EACH HOLE (2 IN EACH ROSE) TO ENGAGE THE SET SCREW AND SECURE THE KNOB ASSEMBLY. ROTATE COUNTERCLOCKWISE TO TIGHTEN IN THE ASSEMBLY AND ROTATE CLOCKWISE TO LOOSEN, SEE FIG 4. NOTE: WHEN TIGHTENING BALANCE BOTH SET

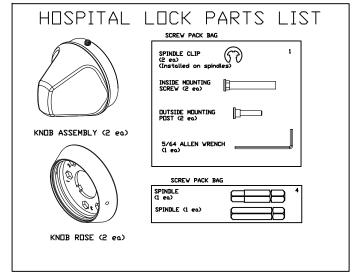

DATE

MATERIAL: NOTED TOLERANCES UNLESS UNLESS OTHERWISE HEAT TREAT: NA **OTHERWISE** SPECIFIED: SPECIFIED: X.X (METRIC) =±0.4 TownSteel FINISH 32D 1° MAX X.XX (METRIC) = ± 0.15 TITLE: DRAWN BY: FRACTIONS = ±.8 HOSPITAL KNOB ANGLES = ±1/2° 707 N. BARRANCA AVE #6 CM ASSY INSTRUCTIONS .12 COVINA, CALIF 91723 DATE: MACHINED SURFACES 125/ PART#: MRX-S-K 2/18/10 ⊕ ☐ THIRD ANGLE

THIS DRAWING AND THE INFORMATION CONTAINED THEREON OR DERIVED THEREFROM ARE THE CONFIDENTIAL PROPERTY OF TOWNSTEEL, INC. IT IS NOT TO BE REPRODUCED, OR DISCLOSED TO OTHERS, AND MAY BE USED ONLY FOR THE PURPOSE OF ENABLING THE PARTY TO WHOM IT HAS BEEN LOANED TO QUOTE ON OR FILL AN ORDER FOR TOWNSTEEL, INC., OR AS MAY BE OTHERWISE AUTHORIZED BY TOWNSTEEL, INC. IN WRITING.